### **Steam Shower Checklist**

Home Builder Edition



mr.steam®

Feel Good Inc.®

## Thinking about installing a home steam shower for your client?

Here's what you need to consider to ensure your installation delights and relaxes your client.

### **Table of Contents**

What You Need For A Steam Shower Installation	2
Steam Generator-What To Took For	3
The Steam Shower Space	4
Steam Shower Construction Materials	5
Steam Generator Location	6
Steam Generator-Basic Parts	7
Steam Shower Details	8
Steam Shower Accessories To Consider	9
	10

mr.steam°

## What you need for a steam shower installation:

It's critical to select the correct steam generator size for the enclosure so there is enough steam for a full steam bath experience.



**MS 90E-400E** 14.5"L x 14.75"H x 6.75"D



**MS SUPER 1-3E** 17"L x 18.5"H x 7.9"D



**MS SUPER 4-6E** 17"L × 18.5"H × 7.9"D × 2

#### RESIDENTIAL STEAM GENERATORS SPECIFICATION CHART

Model No.	Total Room Volume (cu.ft.)	KW	Amps 240/1PH	Wire Size <sup>‡</sup>	Water Usage Gallons <sup>↔</sup>	Shipping Wt.(lb)**
MS90E	up to 100	5	21	10	0.67	30
MS150E	101-150	6	25	8	0.80	30
MS225E	151-225	7.5	32	8	1.0	30
MS400E	226-360	9	38	8	1.2	30
MS SUPER 1E	361-475	10	42	8	1.4	40
MS SUPER 2E	476-575	12	50	6	1.6	40
MS SUPER 3E	576-675	15	63	4	2.0	40
MS SUPER 4E MS SUPER 5E MS SUPER 6E	676-875	20	84	8	2.7	80
	876-1075	24	100	6	3.2	80
	1076-1275	30	125	4	4.0	80

#### OPTIONAL EXPRESS STEAM™

Suitable for all MS Models, Express Steam means you can be steaming in seconds. This option includes a built-in heating element to keep water in the generator tank warm enough to make steam quickly while still allowing water to be safely drained to Code requirements.

IMPORTANT: All MS Generators available in 240v/IPH, 208v/IPH and other voltages/phases. Add BI to Model No. for the 208V/IPH. Add CI suffix to Model No. for the 240V/IPH.

See Mr. Steam Installation and Operation Manual for complete dimensional and installation information.

MS SUPER 4E includes two MS SUPER 1E steam generators, and require either iSteam or iTempoPlus Control, and two matching steamheads.

MS SUPER 5E includes two MS SUPER 2E steam generators, and require either iSteam or iTempoPlus Control, and two matching steamheads.

MS SUPER 6E includes two MS SUPER 3E steam generators, and require either iSteam or iTempoPlus Control, and two matching steamheads.

All Mr.Steam MS Models are cULus Listed and CE and NOM approved.



<sup>‡</sup> Wire size (AWG) based on minimum 90°C rated THHN copper conductors. Refer to the National Electrical Code for other types of conductors.

<sup>\*</sup>Dimensions are for generator only, without AutoFlush® or plumbing features.

<sup>\*\*</sup>Shipping weight & pricing are for generator only, without control or steamhead.

<sup>††</sup> Water usage based on 20 minutes of operation.

## **Steam Generator** what to look for:

Stainless steel construction.

Compact size.

Precision connectors.



- Self-diagnostic LED indicators. Five-second electronic shut off safety feature to prevent low water condition. Anti-hammer, low voltage water solenoid valves. 24-volt transformer. Standard 1/2" full port ball valve. Express Steam factory-installed option to maintain water temperature. Easy installation, operation and service. Eco-friendly and recyclable. UL listed in the US and Canada.
- Automatic cleansing system that drains the system and keeps it empty until activated again.
- Technological advancements complemented by a contemporary design aesthetic.

## **The Steam Shower Space**

- Water tight enclosure with gasketed door and floor drain.
- [ ] Angled ceiling to prevent condensation in steambath area.
- [ ] Ideal maximum height = 8 feet.
- 7 | Vapor sealed light fixtures.
- [ ] No heating, venting or air conditioning devices in steam room.
- [ ] Windows should be double-paned.



## Steam Shower Construction Materials

Tile, marble, granite, acrylic, fiberglass or solid surface composites. Note that construction materials will affect the selection of steam generator.

Use this calculator to determine the proper steam generator to size:


GENERATOR SIZE MATTERS. MATERIALS MATTER.						
Steambath Sizing & S	Selection					
Measure length, width & height of the steam enclosure (in feet):						
Multiply the Length x Width	× Height ROOM VOLUME =					
Construction Materials:						
For natural stones: natural marble, stone, shale, glass block or concrete	Add II0%					
For ceramic or porcelain or glass tile on cement board or mortar bed	Add 40%					
Ceilings above 8 ft.	Add 15%					
(per foot, max 10 ft.)						
Add all figures above to obtain the Total Room Volume required	TOTAL VOLUME					

### **Steam Generator Location**

Locate it as close as possible to the steam shower in a closet, vanity cabinet, heated attic or basement within 60 feet. Do not locate the generator outdoors or inside the steam shower. It should be placed upright only.



# **Steam Generator Basic Parts**

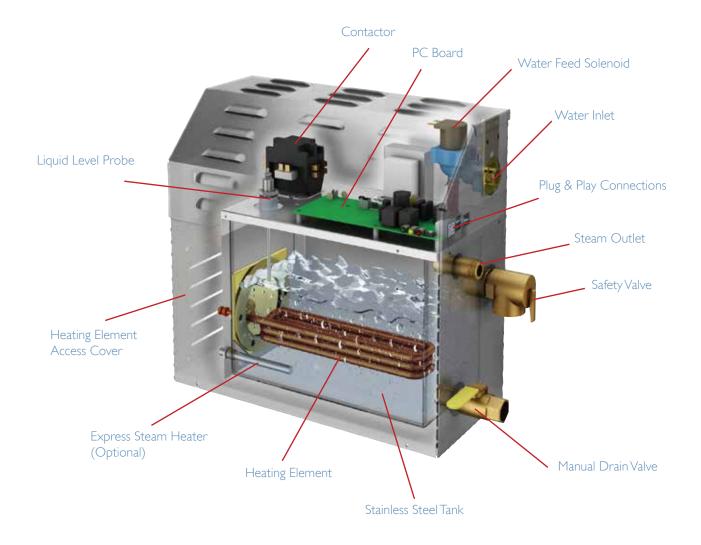

### **Steam Shower Details**




- Control packages iSteam, AirTempo, or iTempo (Brass or Touch Screen).
- [ ] 24/7 pre-start on control for touch screen control.



[ ] Wireless remote on/off control up to 100 feet.





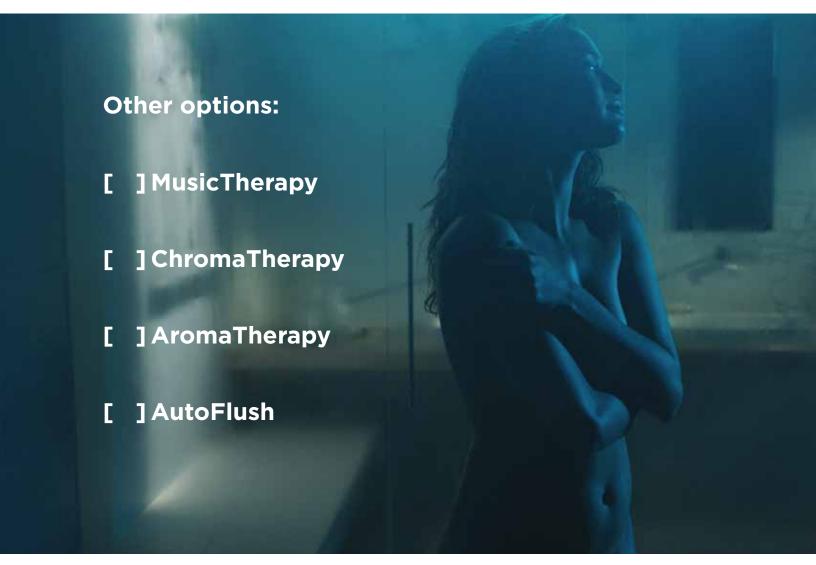

## **Steam Shower Accessories** to Consider:



# Mr.Steam offers the following resources to help specify a steam shower for a new home:

**Ebooks:** Home Steam Shower Buying Guide Steam @ Home Buying Guide

**Spa Sizer** - How to Size a Steam Shower Generator?

Try Our Virtual Spa System

**Dealer locator** which lists Mr.Steam premier dealers

**Videos:** http://mrsteam.com/media-gallery/video-gallery

The **SteamTherapy Blog** (blog.mrsteam.com) with articles such as:

- What builders need to know about steam shower installations.
- 15 Tips to Consider Before Installing a Steam Shower
- Yes, You Can Have a Steam Shower in a Small Bathroom
- How To Install a Steam Generator: 3 Min. Video from Mr.Steam
- Why Bother with Steam Shower AutoFlush Technology?

Please refer to the Mr. Steam installation and operation manual before specifying or installing a steam system.

Available at:

http://mrsteam.com/downloads/technical-downloads















www.mrsteam.com

#### **MRSTEAM®**

MrSteam is a leader and innovator in steam shower systems and spa products. We create experiences that delight both residential and commercial customers alike. MrSteam offers the highest quality products, affordable pricing, top class warranties and unmatched customer service.

#### **CONTACT US**

Headquarters Sussman-Automatic Corporation® 43-20 34th Street Long Island City, NY. 11101 USA tel I-800-76 STEAM (767-8326)

West Coast Sussman-Automatic Corporation® 9410 South La Cienega Blvd Los Angeles, CA. 90301 USA tel I-800-72 STEAM (727-8326)

#### Or write to us at hello@mrsteam.com

Mr.Steam, Mr.Steam in Design, Mr Steam, Feel Good Inc., Aromaflo, AudioWizard, AutoFlush, AutoSteam, Clean Steam... Every Time, Mr.Sauna, Mr.Sauna, Steam-on-Demand, Steam@Home, Sussman, Sussman Lifestyle Group, Tempo, TempoPlus, Tempo Remote, Tempo EXT, Warm-a-Towel, iTempo, iTempoPlus, SteamTherapy, ClubTherapy, ChromaSteam, MusicTherapy, Making Wellness a Way of Life, Water Heat Pressure, Digital I, Steam Genie, Valet Package, Butler Package, Spa Package, VoiceWizard, Voice Genie, Express Steam, From Bathroom to Spa, issizing, isteam, isteamPlus, and Virtual Spa Systems are registered trademarks of Sussman-Automatic Corporation.

AirTempo, Linear Steamhead, A lifetime of Pleasure, HomeWizard, SteamStop, Steam in a Box, iGenie, iSteamTV, SteamStart, MySteam, SmartSizing, The Intelligent Steambath, iButler, and Tala are trademarks of Sussman-Automatic Corporation.

<sup>\*</sup> Please refer to the applicable MrSteam product manual, at mrsteam.com, for installation and operation instructions. Failure to do so may result in an inoperable or hazardous installation. rSee product packaging and labeling for important information.